



ClimbStop™

Makes Sense for your Fence

Contents in Box

- 10 x 1.2 lengths of predrilled Climb Stop
- 100 Buttonhead screws

Tools Required

- Screw driver or Power drill with a phillips head bit
- Hacksaw or grinder with cutting disc
- Tape Measure & Pencil


Installation Instructions

- Remove all contents from box
- Fit the first section in position using ALL screw holes provided where possible
- Install the next section up against the previous, screw in place as before

You may need to slip section behind the post or notch a small section off the bottom lip only to get it behind the post

- Continue as above instructions for all sections needed for your fence

See Diagram Below

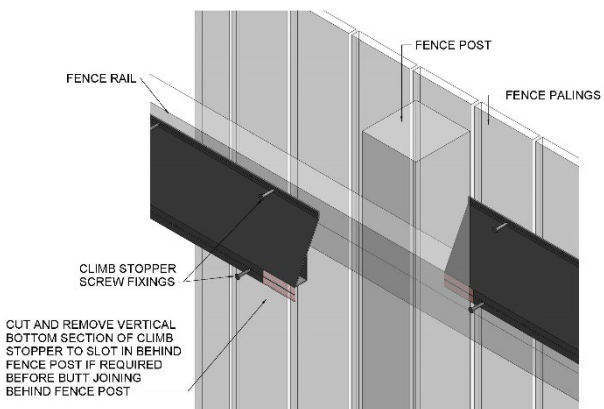

NOTE: You can view a video on How to Install Climb Stop & more information on our website

www.climbstop.com.au

patent pending